

Combi Corporation

Junior Car Seat Joykids Mover

User Guide



- For safety of your children, please read this user guide carefully before use and use the product accordingly.
- Please keep this user guide underneath the seat base for future reference. (Refer to P.7)

This product is an approved model which conforms to regulation UN R44/04 standard.




Universal : G2, 3

Applicable weight : 15kg - 36kg

For safe use of your child seat

Thank you for your purchase of Junior Car Seat. Before use, please read this user guide carefully and use your child seat accordingly.

Junior car seat is designed to reduce the injury to the child in case of traffic accident. However, it is not necessarily a guarantee that the seat can completely protect the child from injury. The caution items mentioned in this user guide are for your reference in order to use this product safely. [Danger], [Warning] and [Caution] indicate the potential consequences if the mentioned are not followed properly and are categorized according to the level of severity.

Labels	Contents of the labels.
 DANGER	Improper usage will directly cause death or severe injury.
 WARNING	Improper usage may cause death or severe injury.
 CAUTION	Improper usage may cause injury or damage of the product.

IN CASE OF EMERGENCY

In case of emergency like car accident, the guardian should release the seat belt for child and remove the child from the car immediately.

Child who fulfills the following conditions may use the product.

This product can be used in 2 different ways according to the growth stage of your child.

Junior seat mode

- Weight Condition : 15kg ~ 36kg
- Height Reference : 95cm ~ 145cm
- Age Reference : Around 3 ~ 11 years old

Using method : Set the vehicle seat belt through the shoulder belt guide on the backrest and waist belt guides on the booster seat to use.



Booster seat mode

- Weight Condition : 22kg ~ 36kg
- Height Condition : 125cm ~ 145cm
- Age Reference : Around 6 ~ 11 years old

Using method : Detach the backrest, and set the vehicle seat belt through the waist belt guide on the booster seat to use. Use shoulder belt positioner to fit shoulder belt to child's body.



Please note that the applicable height and age stated above are for reference only. Please refer to the weight conditions in order to choose the appropriate mode to use with.



Shoulder belt positioner must be used to avoid shoulder belt slipping off in case of accident.

For safe use of your child seat

Inapplicable vehicle seats

Please read before use



Do not apply the junior seat on a vehicle seat in case of any of the following situations.

- Vehicle Seat facing rear or sideway against the driving direction.



- Seat equipped with airbag. Seat equipped with only side air bag is applicable.



- Seat belt of which the width between the belt extension point and the belt buckle is less than 32cm.



- Seat with a mounted middle portion which cannot secure the junior seat.



- Seat equipped with a passive seat belt.


* Passive seat belt refers to seat belt that automatically buckles itself upon sitting.



- Bucket seat with a hollow seat surface.



- Seat of the sitting depth is less than 40cm.

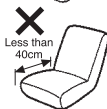

- Vehicle seat without a seat belt.




Using method of this product may vary according to type of seat belt available. There may be cases the product cannot be used on certain type of seat belts.

- Vehicle seat with a 2-point seat belt.



3-point seat belt

Refers to seat belt that secures the body in 3 points, including left and right of the waist and either side of the shoulders.

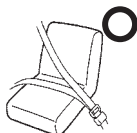

- Vehicle seat with the seat belt extending from the seat part.



2-point seat belt

Refers to seat belt that secures the body in 2 points, one on each side of the waist. (This product is not applicable to 2-point seat belt.)



For safe use of your child seat

Type of seat belt and corresponding points to note.



- Please only install on vehicle seat equipped with 3-point seat belt.
- Please do not install the car seat on the 2-point seat belt, it is because the seat belt cannot function properly which is very dangerous to use.

Only suitable if the approved vehicles are fitted with lap/3point/static with retractor safety-belts, approved to UN R16 Regulation No. 16 or other equivalent standards.

Type of seat belt	Characteristics of seat belt	Points to note	Applicable to installation
ELR (Emergency locking retractor)	Extendable normally but locked in sudden retraction.	Slowly pull out the seat belt to install the junior car seat.	○
AELR	Belt that will be locked and cannot further extend when it is about to rewind after completely being pulled out.	It is danger if the seat belt is completed pulled out. Resume the seat belt first to disable the belt locking function.	○
NR	Seat belt that is not equipped with an automatic rewinding function.	Set the seat belt to an appropriate length to fit the junior car seat.	○
NLR (Non-locking retractor)	Retract device without locking function.		
ALR (Automatic locking retractor)	Locked upon stops while pulling out the seat belt.	Not applicable for installation	✗

DANGER

The following misuses may cause the junior car seat to malfunction and lead to danger.

- Do not seat a child who does not satisfy the applicable conditions, or install on a seat which is inapplicable.

- Do not use the junior car seat if it cannot be secured as stated in this user guide.

- Do not let the child stand, stoop, or kneel on the junior car seat.

- Do not install the junior car seat on a vehicle seat equipped with air bag. In case of collision, the exploded air bag will expose the child to major impact which is extremely dangerous. Seat equipped with side air-bag is applicable.







- Make sure the seat belt is properly adjusted after the child is seated.

- Always fix the junior car seat with the vehicle seat belt when installing onto the vehicle. Never use with a rope, string or other than seat belt to fix it.




For safe use of your child seat

WARNING

The following misuses may cause malfunction to the junior car seat and lead to danger.














- Do not leave your child in the vehicle unattended. In hot days the cabin temperature may rise and endanger the child to heat stroke or dehydration. It may also become the cause of accident. An adult should accompany all the time. 
- Always keep the seat belt fitting tight. Any looseness may get caught around the child's neck and may become the cause of suffocation, or the child may have chance to fall off from the junior seat in accident. 
- Structural damage may happen to the product when it is knocked or made to fall from high level. In such case stop using it again even if the knock is one-off and no physical damage is seen. 
- When installing on vehicle seat with particular safety car seat locking function, disable the function first. Otherwise the seat belt may exert pressure on the child's chest. (Refer to P.3) 
- Do not install on a vehicle seat of which there is rift on the seat belt. 
- The following usage methods cannot make the full use of the booster seat's functions, but also may cause danger. 
- When using the seat, adjust the belt positioner to be flush with the shoulder and make sure the seat belt suits the child's body.

The following misuses may cause malfunction to the junior car seat and endanger the child or other passengers.

- Always fix the junior car seat with the seat belt even when it is not in use. Otherwise it may fall off the vehicle during sudden brakes and may cause disturbance to the driver. 
- Do not install on a front seat if installation inhibits proper and safe use of the gearshift or the handbrake etc.. 
- Do not install on a front seat in a 2-door or 3-door vehicle in case it may obstruct passengers from getting out the vehicle in emergency. 

For safe use of your child seat

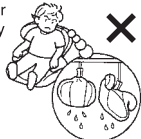⚠ CAUTION

- Exposing the junior seat to direct sunlight will cause the insert metal or other parts to get excessively hot. Always touch and check all parts before seating your child. 
- Do not modify the junior seat or handle it in ways not described in this user guide. 
- Do not adjust the junior seat while driving. 
- The backrest cannot be used alone. 
- Make sure the junior seat is not jammed in between the vehicle doors or other movable parts. 
- Do not put a piece of cushion etc. in between the vehicle seat and the junior seat. 
- Do not use the junior seat other than the purpose of child car seat. Do not use the junior seat as a normal chair. It may have chance to tip over or fall off. 
- Do not leave things unsecured in the vehicle. Things may fall off onto the child when the vehicle is in motion. 
- Do not expose the junior seat to weather. 
- Holding only at the backrest or the seat base may cause the other part to fall off. 
- Seat cover must be attached when use. Do not replace any parts of the junior seat by other things (which may affect proper function). 
- Due to the surface material of vehicle seat, scratch mark may remain after installation. 
- Be careful not to pinch fingers between the gap at the backrest and booster seat. 

Sales package and assembly method

Please check if any parts are missing before assembling the junior seat

Sales package


Booster seat.....1 User guide (this book).....1
Backrest.....1 Drink holder.....1

Assembly method




- Please be careful when assembling the junior seat in case your fingers, may get pinched by the joint between the backrest and the booster seat.
- Please be careful when moving an assembled junior seat in case the backrest gets detached from the booster seat accidentally.


- 1** Place the backrest and booster seat on a flat surface and match the hooks on the backrest with the joint on the booster seat.

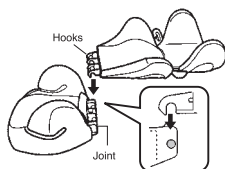


- 2** Press on the lower part of the backrest to secure the hooks into the joint.

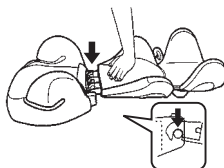

- 3** Lift the backrest upright until it clicks into place.

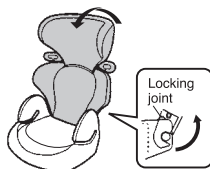


-  Backrest stays when it clicks into place.

- 4** Insert the cover part at the back of the seat into the inner of the backrest cover during use.


Insert the cover part at the back of the seat into the inner of the backrest cover during use.

Insert the cover part at the back of the seat into the inner of the backrest cover.

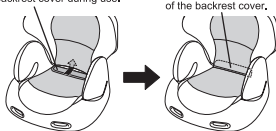


Please read before use

Name of parts

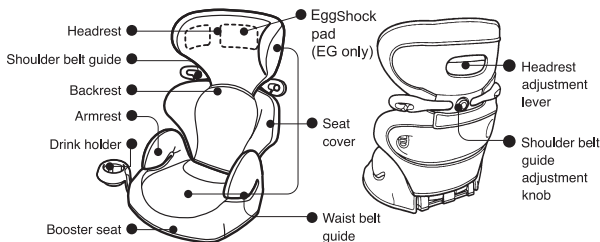

Underneath of booster seat

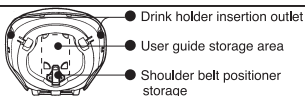

Using Method

1. Installing the drink holder

Drink holder can be attached to the left or right side of the junior car seat.



- Do not put hot drinks into the drink holder, avoid the danger of scald.
- Set the drink holder to the side away from the vehicle door in case it gets jammed in between the door and the junior car seat.
- Do not install the child seat on the front seat in case the child seat together with the drink holder affects operation of handbrake and gear shift.
- Pay attention and prevent child from leaning its body to the drink holder. Otherwise damage may cause to the drink holder.



Some cups or drinks may not fit to the drink holder, make sure the drink holder can hold the cup or drink before use.


Attaching the drink holder

- 1 Slightly lift up the seat cover
- 2 Match the drink holder with the insertion outlet at the booster seat.
- 3 Plug the drink holder into the insertion outlet until a "click" sound is heard.
- 4 Try to pull out the drink holder to check if it is secured.



Detaching the drink holder

Lift the clip underneath the booster seat and pull the drink holder out of the booster seat.

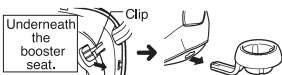

Using method

2. Adjust the height of shoulder belt guide (headrest)


Please adjust the height of the backrest and then the shoulder belt guide to fit the child's body size.



- The shoulder belt guide is used to ensure the vehicle seat belt is securing the child's shoulder at a proper position. Re-adjust it again when it becomes too low in a later growth stage of child.
- Remove the backrest when the child's head protrudes from above the headrest. (Refer to P.12) If continue to use, it will cause greater danger in emergencies.

Reference to the height of shoulder belt guide


Set the shoulder belt guide at a position slightly higher than the child's shoulders.

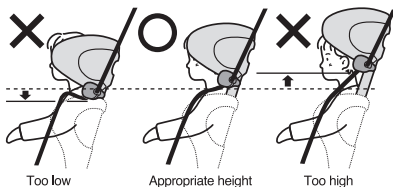

Adjust the height of shoulder belt guide (headrest)

The shoulder belt guide position can be adjusted the height in 7 different pitches.


- 1 ① Squeeze the headrest adjustment lever, and
② Pull up the headrest while holding the backrest at the same time.

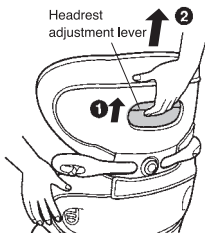

- 2 ① Release the lever at an appropriate height and check, until a "click" sound is heard.
② Try to move the headrest up and down to check if it is secured.



Follow the same procedures if lowering the headrest.

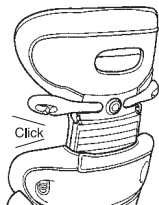

Be careful of your fingers when adjusting the height of headrest in case they get pinched.

Using Method

3. Adjusting the width of shoulder belt guide.

Width of shoulder belt guides can be adjusted to 2 different pitches to fit child's body size.


Width reference

Set the shoulder belt guide appropriately such that it does not catch the child's neck, or does not get loosen from the child's shoulder.



Adjusting method

- 1 Pull the shoulder belt guide adjustment knob at the back of the headrest.
- 2 Adjust the shoulder belt guides (2 different pitches available).
- 3 Restore the shoulder belt guide adjustment knob and check if the shoulder belt guides are secured.

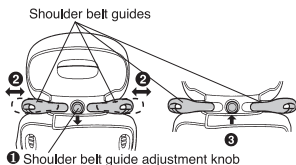

 It is highly recommended to adjust the left and right shoulder belt guides at the same time.

Junior seat mode

- **Weight Condition** : 15kg ~ 36kg
- **Height reference** : 95cm ~ 145cm
- **Age reference** : Around 3 ~ 11 years old

Set the vehicle seat belt through the shoulder belt guide on the backrest and waist belt guides on the booster seat to use.



- Make sure to install on a seat equipped with 3-point seat belt. Do not install with a 2-point seat belt. Otherwise the child seat may not function properly as designed and may cause of danger.
- Make sure to secure the child seat with the seat belt even when it is empty. Otherwise it may become a potential danger in case of sudden brake.



- Disable the securing function of seat belt if there is any locking function of child car seat on the seat. Otherwise it may exert excessive pressure on child's chest. (Refer to P.3 for details.)
- Always keeps the seat belt is tightly fitted. Any looseness may cause the child be tangled to the neck that may cause of suffocation.
- Do not install on a seat of which the seat belt is damaged.


Junior seat mode

Preparation before seating the child.




WARNING

- Set the backrest of the vehicle seat at the upright position in case it has a recline function. A child seat installed on a reclined vehicle seat may fail to protect a child from accident or child may fall off the junior car seat. The loosen seat belt may tangle to the child's neck causing suffocation.
- Set the junior car seat backrest such that it is around 15 degree in line with the vehicle seat backrest. Check the angle with the angle checker printed on the cover of this user guide.

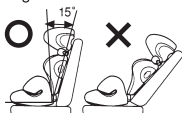


- 1** Remove the headrest of the vehicle seat if it is detachable.
- ② Lower the seat belt if it is adjustable.

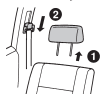


- 2** Place the junior car seat on the vehicle seat. Set the vehicle seat belt through the shoulder belt guide on the backrest and waist belt guides on the booster seat, and then fasten to the buckle.



Keep the junior car seat assembled as illustrated even when it is empty.

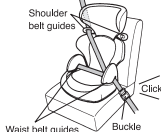

Hint When the seat buckle button strikes the armrest of the booster seat, do not pass the shoulder belt through the belt guide, but through the upper (outside) of the armrest.

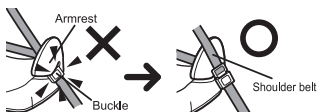

Seating the child

Seat the child deep into the child seat.



WARNING

Do not seat the child as illustrated. Otherwise the junior car seat may not function as designed and become a danger.

- Sitting with its feet up on the seat base.



- Leaning its body extremely to the side.



- Leaning or bending its body forward.



CAUTION

Be careful of the joint between the backrest and the booster seat in case child's clothes get jammed.

- 1** Release the buckle temporarily. Seat the child deep into the seat, pull out the seat belt as illustrated and fasten the buckle until a sound "Click" is heard.



Junior seat mode




- Do not let the child get on and off the seat alone. Make sure the guardian should assist seating or unseating the child to junior car seat.
- The child's arm at all times should not go underneath the waist belt.



Check after installation

Check the followings after seating the child and fastening the seat belt.

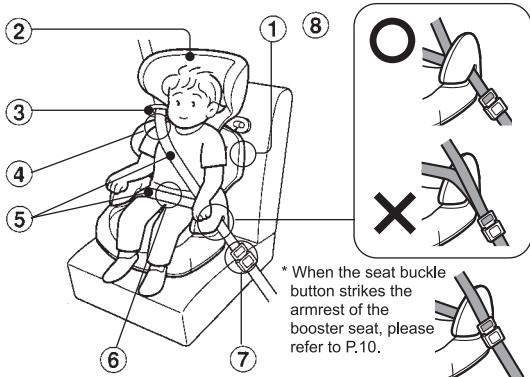

- ① Tightly fit the Junior car seat to the vehicle seat backrest.
- ② Position of belt guide (headrest) is set properly.
- ③ Seat belt (shoulder belt) is passing through the shoulder belt guide properly.
- ④ Shoulder belt is not tangling child's neck, or too loose from child's shoulder.
- ⑤ Seat belt fits tightly with child, not twisted, and without any looseness.
- ⑥ Child's pelvis is secured with seat belt (waist belt).
- ⑦ Insert metal is fastened to buckle firmly.
- ⑧ Seat belt (shoulder belt and waist belt) is passing through waist belt guides.



Check and re-install once again the steps stated on P.10 ~ 11 in case junior car seat is not secured. Install on other seats if the junior car seat still fails to secure. Otherwise the junior car seat may not function properly as designed and may become cause of danger.

Booster seat mode

- Weight Condition : 22kg ~ 36kg
- Height Condition : 125cm ~ 145cm
- Age Reference : Around 6 ~ 11 years old



Firstly detach the backrest, and set the vehicle seat belt through the waist belt guide on the booster seat and anchor the shoulder belt positioner to the vehicle shoulder belt to fit child's body.

⚠ DANGER

- Make sure to install on a seat equipped with 3-point seat belt. Do not install with a 2-point seat belt. Otherwise the junior car seat may not function properly as designed and may cause danger.
- Make sure to secure the child seat with the seat belt even when it is empty. Otherwise it may become a potential danger in case of sudden brake.

⚠ WARNING

- Disable the securing function of seat belt if there is any locking function of child car seat on the seat. Otherwise it may exert excessive pressure on child's chest. (Refer to P.3 for details.)
- Always keeps the seat belt is tightly fitted. Any looseness may cause the child be tangled to the neck that may cause of suffocation.
- Do not install on a seat of which the seat belt is damaged.
- Make sure to use shoulder belt positioner when using in booster seat mode.

Detach the backrest


When detaching the backrest, place the junior car seat on a place where the backrest can be folded up to 270 degree backward.




2 Fold the Junior car seat further until it is 270 degree from the backrest.



1 Fold the backrest backward until it gets detached from the locking joint.

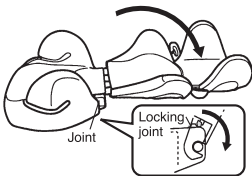

3 ① Lift the booster seat up slightly.
② detach it from the backrest.

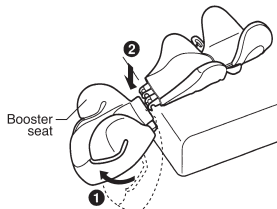

Booster seat mode

Preparation before seating the child.



Set the backrest of the vehicle seat at the upright position in case it has a recline function. A child seat installed on a reclined vehicle seat may fail to protect a child from accident or child may fall off the child seat. The loose seat belt may tangle to the child's neck causing suffocation.




1 Restore the headrest of vehicle seat if it has been detached.

2 Place the booster seat on the vehicle seat, and set the vehicle seat belt through the waist belt guide on the booster and fasten to the buckle until a "click" sound is heard.




Keep the booster seat assembled as illustrated even when it is empty.

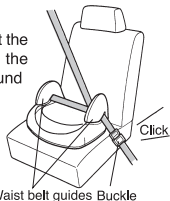

Hint




When the seat buckle button strikes the armrest of the booster seat, do not pass the shoulder belt through the belt guide, but through the upper (outside) of the armrest.

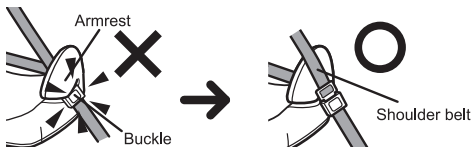

Be sure to use the shoulder belt positioner. (Refer to P.13~14)

Seating the child

1 Seat the child into the junior car seat deeply. Then adjust the height of shoulder belt positioner to be the same height of child's shoulder. Shoulder belt positioner is stored underneath of booster seat.

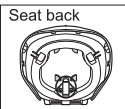

To shorten




To extend



Seat the child deep into the junior car seat.

- 2** Pull out the seat belt of the vehicle. Then set the shoulder belt to pass through the shoulder belt positioner and the waist belt to pass through the waist belt guide (under the armrest). Please make sure the buckle is firmly secured until we hear the sound "click" as illustrated in the picture.

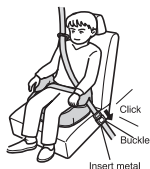


WARNING

The child's arm at all times should not go underneath the waist belt.

Check after installation

Check the followings after seating the child and fastening the seat belt.

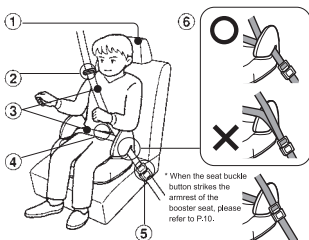

- ① Headrest of vehicle seat is attached.
- ② Shoulder belt through shoulder belt positioner is not tangling child's neck, or too loose from child's shoulder.
- ③ Seat belt fits tightly with child, not twisted, and without any looseness.
- ④ Seat belt (waist belt) is securing child's pelvis.
- ⑤ Insert metal is fastened to buckle firmly.
- ⑥ Seat belt (shoulder belt and waist belt) is passing through waist belt guides.

Correct position of shoulder belt positioner



Adjust shoulder belt positioner to be the same height of child's shoulder as illustrated so that vehicle seat fit child's body.

Attachment of belt



If the belt of shoulder belt positioner is detached, please attach the belt as illustrated.

WARNING

Check and re-install once again the steps stated on P.13-14 in case junior car seat is not secured. Install on other seats if the junior car seat still fails to secure. Otherwise the junior car seat may not function properly as designed and may become cause of danger.


Care and maintenance

Detaching the seat cover




Do not use a junior car seat without a seat cover. Do not replace the seat cover with other things than official approved spare parts. (Failure to do so may affect the safeness of the junior seat.)

- 1** Detach the backrest from the booster seat. (Refer to P.12 "Detach the backrest")

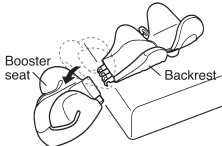


- 2** ① Release the 4 hooks on the booster seat.
② Follow the steps ①-② to remove the seat cover from the armrest and then detach the whole seat cover.

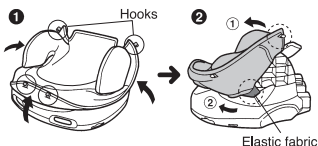


The method to remove the seat cover from armrest
Remove the seat cover ① to the half way and then detach the reddish elastic fabric ② at the armrest.

- 3** Release the snap on the backrest, and then detach the seat cover from the backrest.

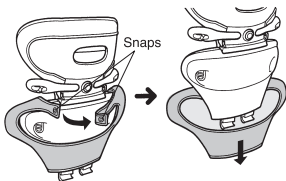


- 4** Release the 6 hooks on the back side of the headrest, and then detach the rubber band from the lower part of the backrest. Remove the seat cover from the seat.

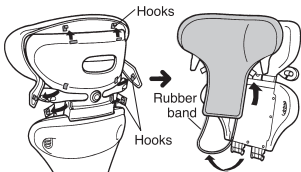


Lift the headrest first in case there is difficulty in releasing the hooks below the shoulder belt guides.

Attaching the seat cover

- 1** Cover the headrest with the seat cover, and then secure the 6 hooks on the back side of the headrest and then restore the rubber band to the lower part of the backrest.


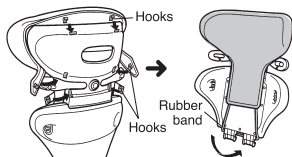


- 2** Face the backrest properly and then cover the backrest with the seat cover. Secure the snap at the back.

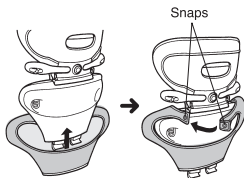


- 3** Attach the seat cover to the booster seat.

- ① Cover well the armrest with the seat cover.
- ② Make sure the seat cover well fitted to the armrest and restore the rest part of seat cover to the booster seat.
- ③ Well cover up the seat cover to the booster seat as well as the ventilation holes.

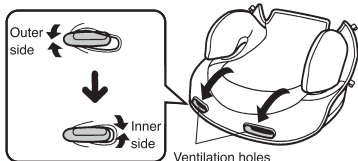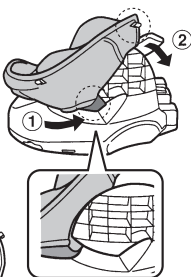

- ④ Set the seat cover properly at around the ventilation holes from the outer side first and then the inner side.
- ⑤ Secure it with 4 hooks.

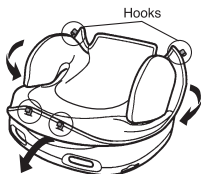

Care and maintenance

Washing the seat cover and other sewn parts

Be sure to follow the washing instructions and cautions below.

- Follow the instructions on the washing label sewn onto the sheet cover.
- When using a washing machine, place the items in a laundry net. Failure to do so may result in fraying or other damage.
- Use the gentle cycle of the washing machine with cold or lukewarm water, or wash by hand.
- Do not use bleach.
- Use a neutral detergent. Do not use detergent containing fluorescent brightener or bleach. This may cause chapped skin or a rash.
- When using a horizontal washing machine (a washing machine with the drum facing horizontally or inclined), make sure the water level is sufficient.
- Color fading may occur due to the nature of the product.
- It is recommended to wash separately from other clothing and lightly colored items.
- Rinse thoroughly, wring out lightly, and then arrange the shape and dry in the shade.
- Do not iron.
- Do not use a dryer or dry cleaning.

Maintenance of the main body

Normally wipe clean with a well-wrung wet (water) cloth. When extremely dirty, remove the dirt using a solution of neutral detergent diluted with water, then wipe with a wet (water) cloth and dry in the shade.



- Do not use undiluted neutral detergent, gasoline, benzene or other organic solvents when cleaning. These may damage the main body, which is dangerous to the child.

Storage

Main body

When the junior car seat is not going to be used for a long period of time, remove from the car and store it in a safe place away from children.

User guide

Please read this user guide carefully and store it underneath the booster seat.

Disposal

- When disposing of the child car seat, follow the standards of your municipality or region.
- The child car seat may suffer structural damage in the event of collision or even if it is dropped one time or falls from a high level. In this case, immediately stop using the child car seat even if no damage is visible. When disposing of the child car seat after an accident, remove the seat cover and other parts before disposal to prevent the child car seat from being reused.